

WiFi Button

Installation manual
Istruzioni d'installazione (retro)


Manuel d'installation (2ème dépliant)
Installationsanleitung (zweites Faltblatt)



myStrom AG
Alte Tiefenastrasse 6
3050 Bern / Switzerland
www.mystrom.ch

Quick-Start for customers with a Swisscom Internet-Box

 You are the owner of a Swisscom Internet-Box – this makes the installation very simple.

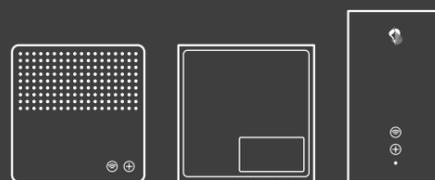

Download the Swisscom Internet-Box App



Launch App

Tap on «Smart Home» – then on «myStrom».
Open a free account or connect with existing one.

Add WiFi Button

Tap on «+» to register the new WiFi Button.

All Done

Quick-Start for customers without a Swisscom Internet-Box

Download the myStrom App



Launch App

Open a free account or connect with your existing one.

Add WiFi Button

Tap on «+» to register the new WiFi Button.

All Done

Button, LED, Modes, Reset

Button

The WiFi Button supports 3 programmable push-patterns.

Short Push (approx. 1/2 second)

Long Push (approx. 2 seconds)

2x sequential short pushes (within 2 seconds)

Touch

The WiFi Button supports the query of its Status regarding action that has been attributed to the «Short Push» (Switch, Bulb or Scene)

LED

OFF	WiFi Button inactive / no power
White / blinks every 15 seconds	WLAN connection Mode (WPS) for 2 minutes after Reset
Blinks white/red	Manual WLAN Connection Mode
Blinks 10x white	Reset successful
Blinks 3x green	WPS successful
Blinks 3x red	WPS unsuccessful
Blinks 1x green	Status = ON/active
Blinks 1x red	Status = OFF

Connection Mode

WPS	During 2 minutes – if not connected to a WLAN network or after Reset
Manual	Push button after 2 seconds during WPS Mode

Reset

Push the button for 10 seconds > it will blink white/red > release your finger > within 5 seconds, push it again, once > it will blink 10x white – this will Reset the WiFi Button to its factory settings. The connection to your WLAN network is lost.

Troubleshooting

Reconnect the WiFi Button to the WLAN network

In case it loses the connection to the WLAN network, the WiFi Button must be either restarted (remove the batteries and put them back in) or it should be reconnected to the WLAN network. Before you reconnect it, please Reset the WiFi Button.

The described process pre-requires that your WLAN Router/Gateway or your WLAN Access Point supports WPS. WPS allows to easily connect simply by pushing a button. If this is not the case, please follow the instructions in the myStrom App under «Add Device».

- 1 Reset – Push the button for 10 seconds > it will blink white/red > release your finger > within 5 seconds, push it again, once.
The WiFi Button blinks 10x white and fast. It will now be in WPS Mode for 2 minutes - indicated by a slow blinking white.
If the WiFi Button does not blink in white, please repeat this step.

- 2 Push the WPS button on your Router or Access Point –  or  depending on the type of device.
The Router/Access Point normally indicates that it is in WPS Mode.
Please check the exact process in your Router's or Access Point's manual.

- 3 The WiFi Button blinks 3x green if it has been successfully added to your WLAN network.
The WiFi Button blinks 3x red if it could not connect to your WLAN network. Please repeat all the steps.

FAQ & Support

What should you do if the WiFi Button is not working?

For test purposes, bring the WiFi Button into the same room where your DSL router or Access Point is. If the WiFi Button works without any problem, the problem most probably lies in the fact that the WiFi signal at the installation place is too weak. In this case, you would require a WLAN repeater (must be purchased separately) that can extend the reach of your WLAN signal.

If the WiFi Button still does not work after this test, please reset it and re-connect it to your WLAN network.

Further help is available on
www.mystrom.ch/en/help/faq

Support
Please use our contact form on
www.mystrom.ch/en/help/contacts